

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Creating low jitter plasma channel in a 3D–printed capillary, filled with gas Towards a Plasma Particle Accelerator

Ehud Behar

Supervisors:

Dr. Amir Capua and Prof. Arie Zigler

The Hebrew University of Jerusalem

Table of Contents

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Introduction

Today's Particle Accelerators

Background to plasma

Preformed Plasma channel

Characterisation of the plasma

Research Goals

Results

Low Jitter

Spectroscopy measurement

Optical Guiding

Summary

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

The goal: design a low-jitter plasma channel for a meter-scale particle accelerator.

Applications:

- Experiments on the behaviour of nuclear matter
- Creating radiation sources for medical use

Linear accelerators

Introduction

Research

Goals

Results

Low Jitter


Spectro-
scopy

Optical
Guiding

Summary

At present, all high energy accelerators run into limits.

- The accelerating electric fields must be less than 100 MV/m , to avoid electrical breakdown.
- Each GeV of energy requires $\sim 100 \text{ m}$ of acceleration length.

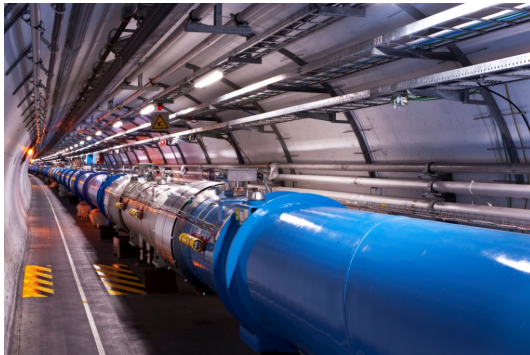

Laser Wake-Field Acceleration (LWFA)

A plasma-based charged particles accelerator

Introduction

Research

Goals

Results

Low Jitter


Spectro-
scopy

Optical
Guiding

Summary

Electrical breakdown is part of the design.

The power source is a laser beam or a charged particle beam.

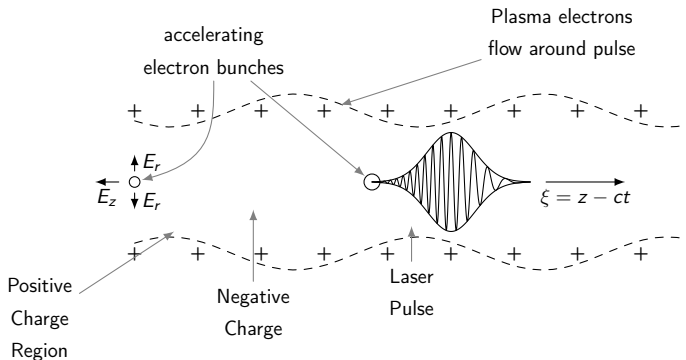


Same as CERN, but in smaller scale.

Limitations of LWFA

Laser defocusing

Acceleration is achieved only when the laser beam is focused to \sim tens of μm in diameter.

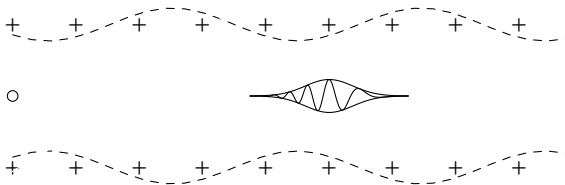

Solution: Use a wave-guide.

Waveguide

Basic concept

Introduction

Research

Goals


Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

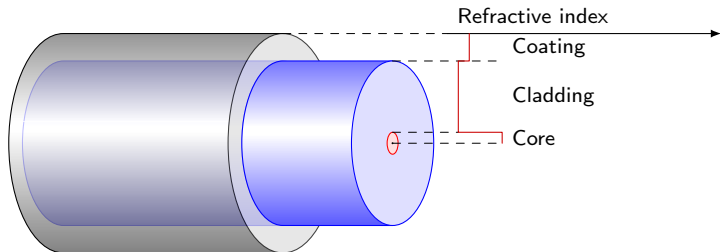

Light confined in core, cladding with a smaller refractive index.

Construct a plasma waveguide

Capillary Discharge

Introduction

Research

Goals

Results


Low Jitter

Spectro-
scopy


Optical
Guiding

Summary

Generate a plasma channel by means of electrical discharge.

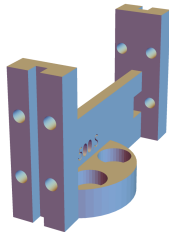

Ablated capillary

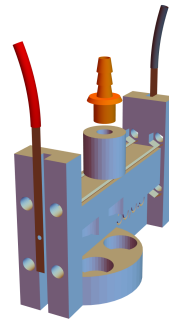

Gas—filled capillary

Apply voltage (\sim kV) on the capillary ends to start a discharge.

The Plasma state

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Ionised gas, electrically neutral.

Defined by N_e (cm^{-3}) and T_e (eV).

Characteristic quantities:

Debye length
$$\lambda_D = \sqrt{\frac{\epsilon_0 k_B T_e}{N_e e^2}}$$

Plasma Frequency
$$\omega_p = \sqrt{\frac{N_e e^2}{m_e \epsilon_0}} \text{ rad/sec}$$

Parabolic density profile

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Plasma dispersion relation:

$$\omega^2 = \omega_p^2 + c^2 k^2$$

The index of refraction \tilde{n} is

$$\tilde{n} = \frac{ck}{\omega} = \sqrt{1 - \frac{\omega_p^2}{\omega_L^2}} \approx 1 - \frac{\omega_p^2}{2\omega_L^2} = 1 - \frac{N_e}{2N_{\text{cr}}}$$

where

$$N_{\text{cr}} = \frac{\omega_L^2 \epsilon_0 m_e}{e^2}$$

is the critical plasma density.

Parabolic density profile

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy



Optical
Guiding

Summary

To achieve guiding, we need variation in \tilde{n} .

Ideally, the radial density profile (RDP) is parabolic:

$$N_e(r) = N_e(0) + \Delta N_e \left(\frac{r}{r_{ch}} \right)^2$$

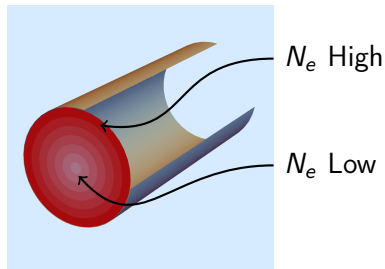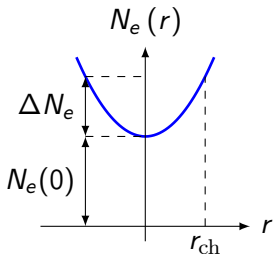

Characterisation of the plasma

Hydrogen Spectrum

Introduction

Research

Goals

Results

Low Jitter



Spectro-
scopy

Optical
Guiding

Summary

Hot plasma emits light.

The emitted spectra can give information about N_e and T_e .

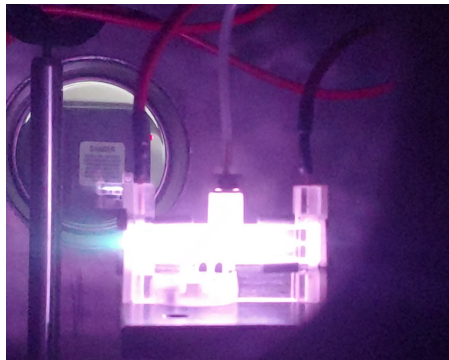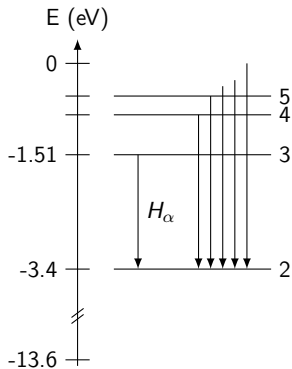

$$H_\alpha : \lambda = 656.28 \text{ nm}$$

Stark Broadening

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy


Optical
Guiding

Summary

Plasma is a charged medium.

Electric micro-fields perturb the atomic energy levels.

Averaging over different neighbours converts the Stark splitting to Stark broadening.

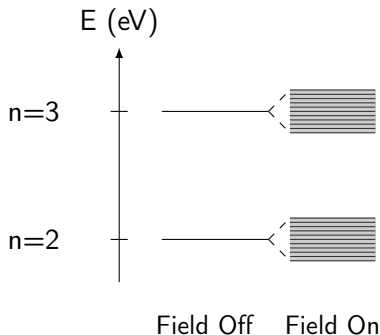

Stark Broadening

Introduction

Research

Goals

Results


Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Line shape — a Lorentzian

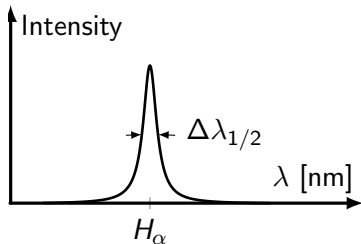

Relation between N_e and $\Delta\lambda_{1/2}$ is tabulated:

$$N_e = \left(\frac{\Delta\lambda_{1/2}}{\gamma(N_e, T_e)} \right)^{3/2}.$$

Weak dependence on temperature, in our experiment:

$$N_e [10^{18} \text{ cm}^{-3}] = \left(\frac{\Delta\lambda_{1/2} [\text{nm}]}{5.4} \right)^{3/2}.$$

Table of Contents

Introduction

Research
Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Introduction

Today's Particle Accelerators

Background to plasma

Preformed Plasma channel

Characterisation of the plasma

Research Goals

Results

Low Jitter

Spectroscopy measurement

Optical Guiding

Summary

Research Goals

Introduction

Research
Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

1. Study of discharge evolution, low jitter of discharge ignition
2. Characterisation of the discharge, utilizing Stark broadening
3. Demonstration of optical guiding

Experiment Scheme

Introduction

Research
Goals


Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

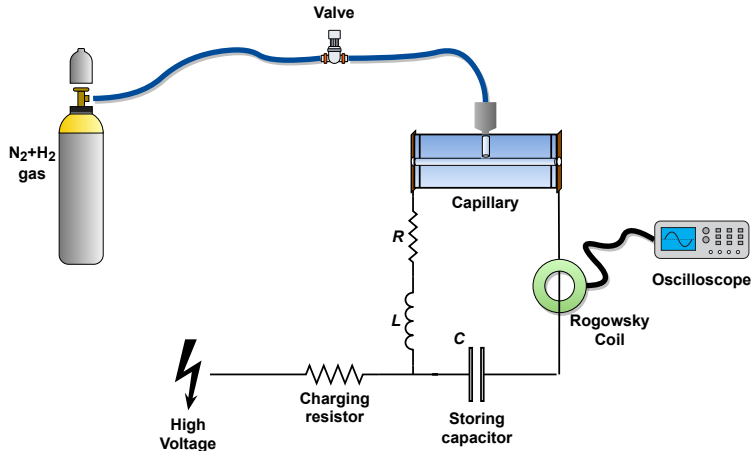

Capillary inside a vacuum chamber, maintained at 10^{-4} torr.

Table of Contents

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Introduction

Today's Particle Accelerators

Background to plasma

Preformed Plasma channel

Characterisation of the plasma

Research Goals

Results

Low Jitter

Spectroscopy measurement


Optical Guiding

Summary

Results

Low Jitter

Plasma is generated, but not in a stable regime.

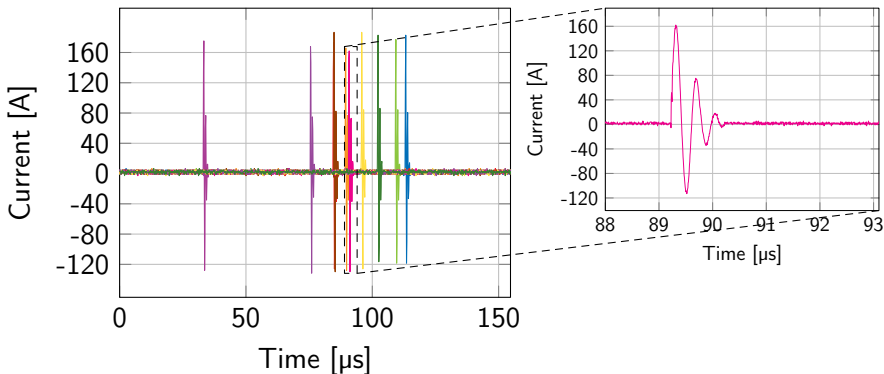

— Rogowsky coil reading

jitter $\approx 80 \mu\text{s}$

Use a laser pulse to ignite the plasma

Introduction

Research

Goals

Results


Low Jitter

Spectroscopy

Optical Guiding

Summary

The Nd:Yag laser pulse ionizes matter and detaches electrons.

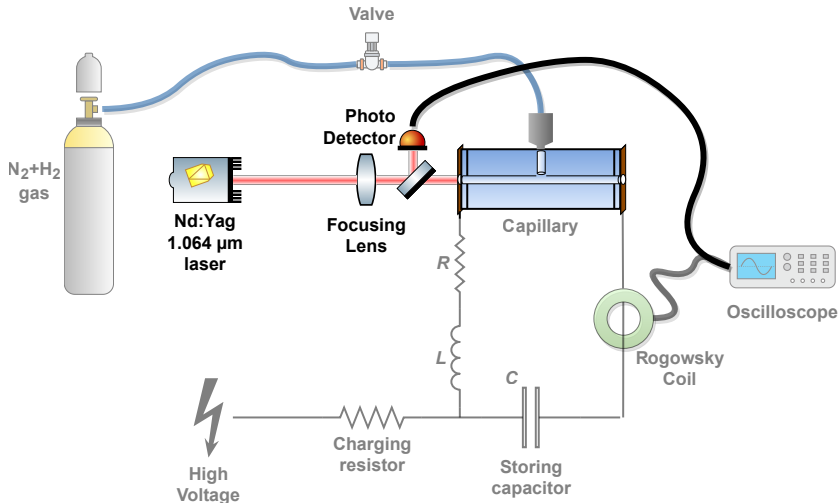

Experimental Results

Low Jitter

Introduction

Research

Goals

Results



Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

12 consecutive capillary discharges. Demonstrating low ignition jitter.

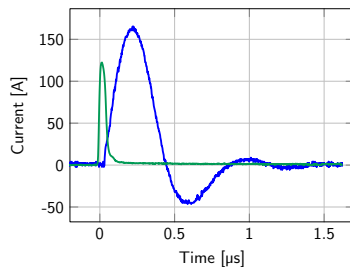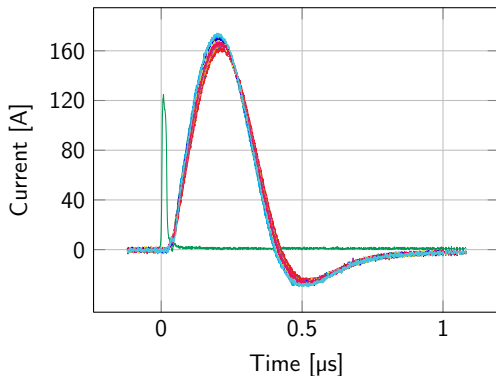

— Nd:Yag laser pulse
— Rogowsky coil reading

$$\text{jitter} \approx 1 \pm 0.36 \text{ ns}$$

Spectroscopy measurements

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

- ▶ Plasma channel depth and density measurement
- ▶ Radial and longitudinal density profile
- ▶ Means: A spectrometer and a fast camera

Radial density profile

Introduction

Research

Goals


Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

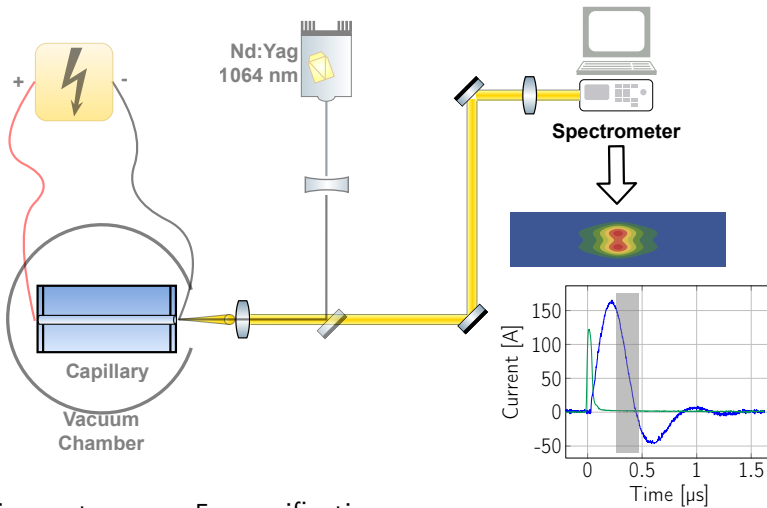

Imaging system — $\times 5$ magnification.

iCCD camera 40 ns gate-on time.

Data Analysis

Introduction

Research

Goals




Results

Low Jitter

Spectro-
scopy


Optical
Guiding

Summary

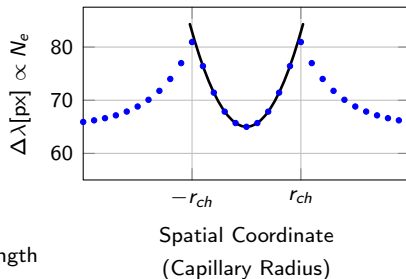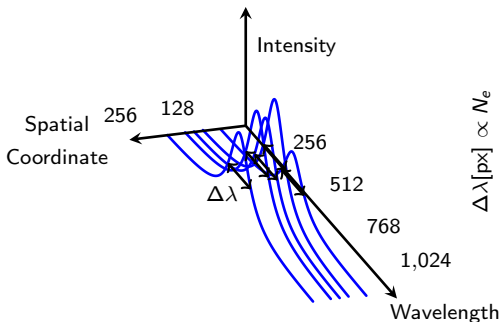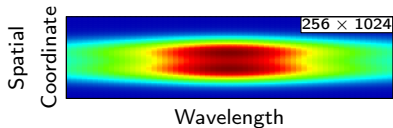

pixel size = $26 \mu\text{m} \times 26 \mu\text{m}$

Fit a Lorentzian to each row of the data.

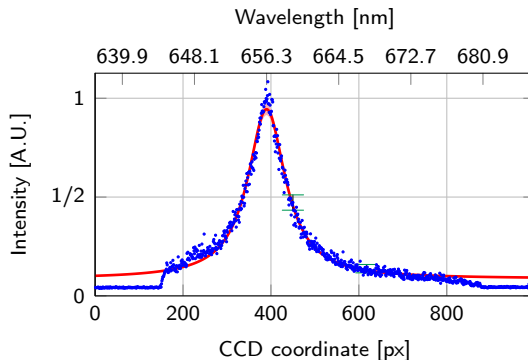

Stark Broadening on the order of 3 nm.


Spectroscopy measurements

Radial density profile

Density minimum on the axis of the capillary.

$$\Delta N_e \sim 4 \times 10^{17} \text{ cm}^{-3}$$


with $r_{\text{ch}} \approx 50 \mu\text{m}$ and $N_e(0) \approx 4 \times 10^{17} \text{ cm}^{-3}$.

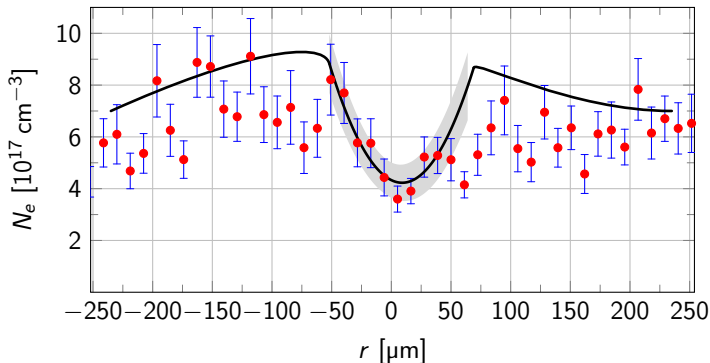

Longitudinal density profile

System setup

Verify longitudinal homogeneity of the plasma density.

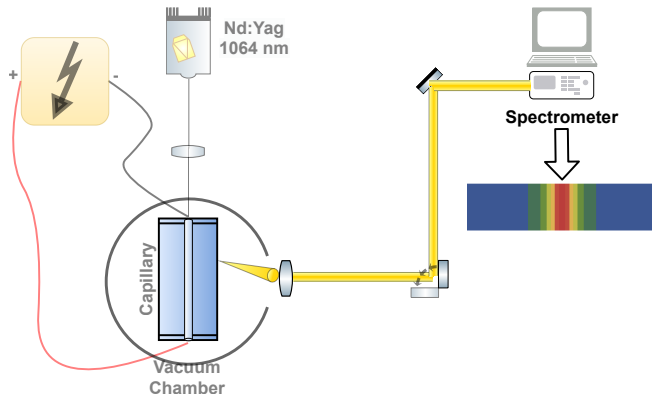

The entire capillary length was imaged.


iCCD camera 1 μ s gate-on time.

Longitudinal density profile

Result

Mean plasma density \bar{N}_e of

$$\bar{N}_e \sim 3.3 \pm 0.8 \times 10^{17} \text{ cm}^{-3}.$$

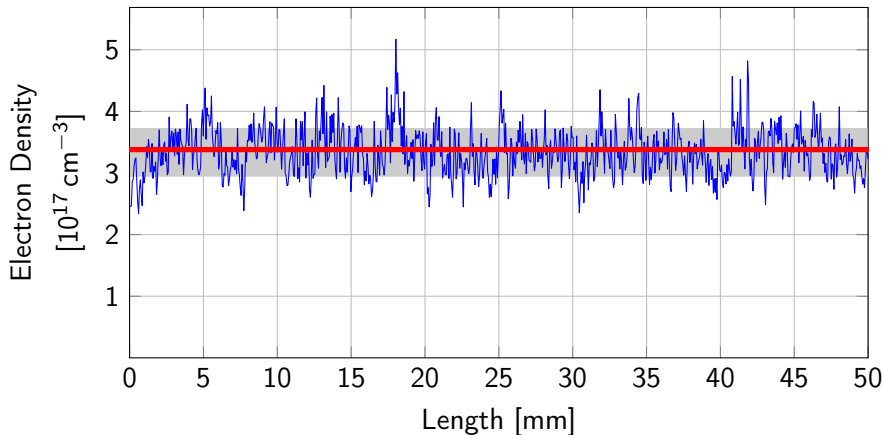

Optical guiding

System setup

Introduction

Research

Goals

Results

Low Jitter


Spectro-
scopy

Optical
Guiding

Summary

System setup as before, but now adding an oscillator laser.

Pulses at a 84 MHz rate.

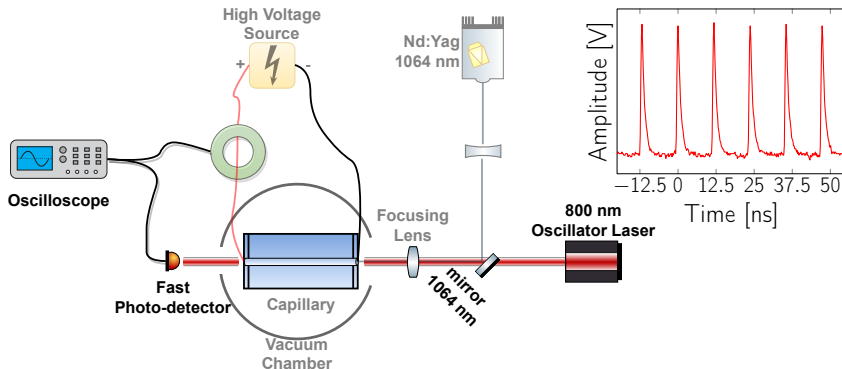

Beam aligned through the capillary, to a fast photo-diode.

Optical Guiding

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding


Summary

Upon plasma discharge, we look for an increase in the detected amplitude — optical guiding.

$$\text{transmission ratio} = \frac{A_{t < 0}}{A_{\max}}$$

The explanation:

A plasma lens forms, the radiation is focused and trapped by the plasma.

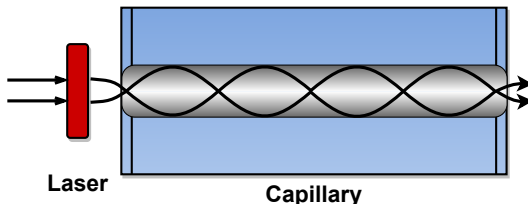

Optical guiding

Results

Introduction

Research

Goals


Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

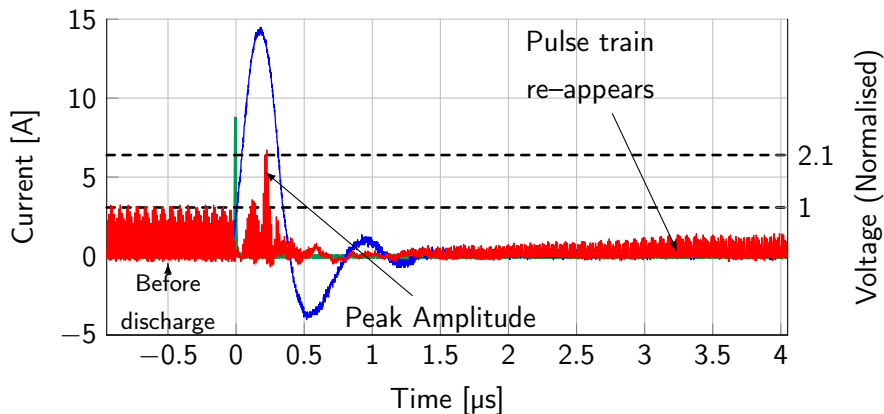

■ — Nd:Yag laser pulse

■ — Rogowsky coil reading

■ — detected oscillator signal

$$\frac{A_{t<0}}{A_{\max}} \approx 2.1$$

Optical Guiding

Higher voltage difference

Introduction

Research

Goals


Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

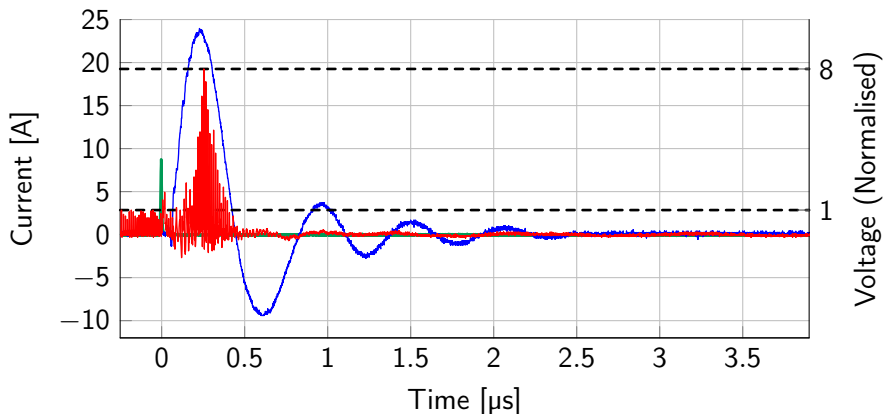

■ — Nd:Yag laser pulse

■ — Rogowsky coil reading

■ — detected oscillator signal

$$\frac{A_{t<0}}{A_{\max}} \approx 8$$

Duration of the plasma channel

Introduction

Research

Goals

Results


Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Correlation between applied voltage and the transmission ratio:

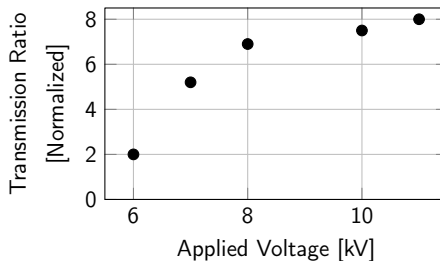

Duration of the plasma channel:

$$\Delta t_{\text{channel}} = 50 - 100 \text{ ns.}$$

Table of Contents

Introduction

Research

Goals

Results

Low Jitter

Spectro-
scopy

Optical
Guiding

Summary

Introduction

Today's Particle Accelerators

Background to plasma

Preformed Plasma channel

Characterisation of the plasma

Research Goals

Results

Low Jitter

Spectroscopy measurement

Optical Guiding

Summary

A long lasting, working set-up to produce plasma channels generated in gas filled-capillaries.

- ▶ Produce jitter controlled plasma discharges, on the time scale of 1 ns
- ▶ Verification of conditions for optical guiding by spectroscopy means
- ▶ Demonstration of optical guiding, to last for 50 – 100 ns

Future work —

Incorporating our system and knowledge in a LWFA experiment, on purpose for compact particle accelerator.